

QUIETWALK

100
SQUARE FOOT
1.4MM THICKNESS


MULTIPURPOSE UNDERLAYMENT

Less Noise
More Comfort
Better Floor



Made in the U.S.A.

SOUND CONTROL

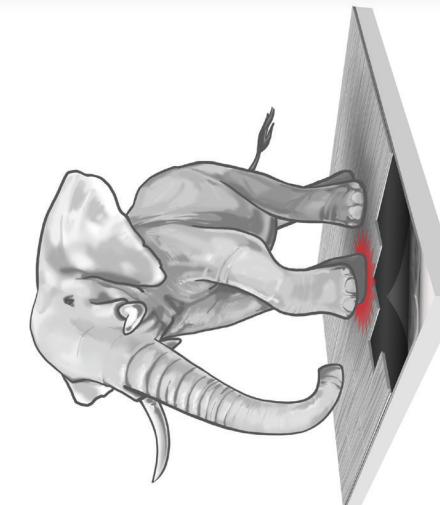


SOUND REDUCTION!
Recycled fibers absorb sound and keep it from traveling to other rooms.

MOISTURE PROTECTION



FEATURING DRI-WICK™ TECHNOLOGY

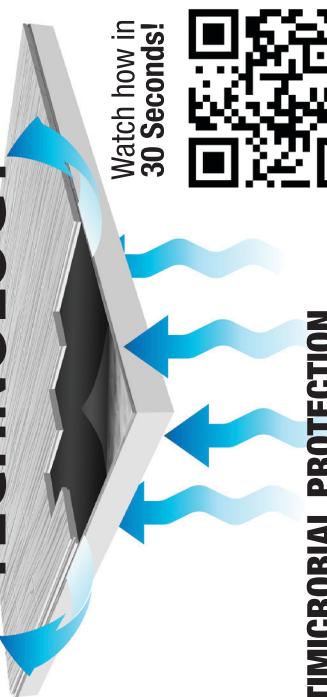


Watch how in
30 Seconds!



ANTIMICROBIAL PROTECTION

Wicks moisture and keeps floor dry

DURABILITY

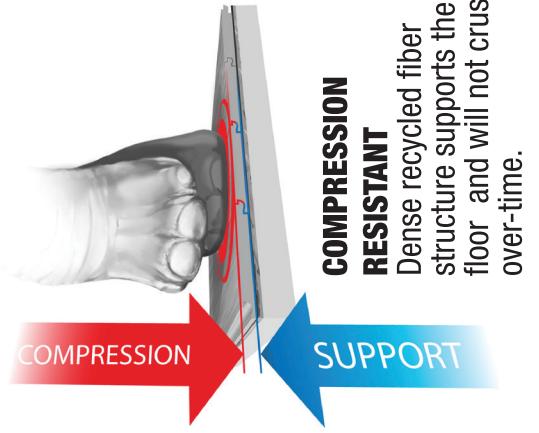

COMPRESSION RESISTANT
Dense recycled fiber structure supports the floor and will not crush over-time.

SUPPORT

DIMENSIONS

1.4 mm thick x 3 ft wide x 33.3 ft long

SOUND INSULATION

IIC 70 STC 62 Delta IIC 28

MOISTURE VAPOR EMISSIONS

.12 LBS / 1000 SQ FT / 24 HOURS

THERMAL INSULATION

R-Value 0.528

COMPRESSION STRENGTH

64.58 PSI

PRODUCT DETAILS


SAFETY & ENVIRONMENT

- Odorless, No VOCs
- Antimicrobial Protection
- Approved for use with radiant heat systems
- Made from 94% recycled materials
- LEED compliant

Installation Friendly - Built in Seam Seal!



SAFETY & ENVIRONMENT



MPglobal

2500 Old Hadar Road | Norfolk, NE USA

100 sq. ft Roll (3' x 33.3')

QW100LV

INSTALLATION INSTRUCTIONS

All wood and concrete subfloors must be flat within 1/8" over a 6' span, or 3/16" over a 10' span.
All areas must be checked prior to installation.



▶ View Installation Videos and Tips at quietwalk.com/lv-install



🌐 View Limited Lifetime Warranty at quietwalk.com/lv-warranty

GENERAL INFORMATION

Product may be installed over:

- QuietWalk LV be used over any subfloor approved by the finished floor covering manufacturer
- Suitable with Radiant Heat Systems

Recommended Uses:

- Residential applications on all grade levels
- Floating Vinyl, Laminate and Engineered Wood Floors
- Commercial double glue applications (4mm or thicker flooring)
- Interior use in dry, heated areas

INSTALLATION METHODS

Floating Floor Installation:

- Be sure the subfloor is clean, smooth and free of dust and debris
- Unroll the QuietWalk Luxury Vinyl Underlayment and flip it over so the film side is up (felt side down)
- Make sure that underlayment seams run perpendicular (at right angle) to the long dimension of the planks.
- Underlayment must be positioned with a minimum 4" separation between seams of underlayment and seams of finished flooring products
- Trim the perimeter edges of the QuietWalk Luxury Vinyl Underlayment 1/4" from the wall
- Butt seams together and seal using the factory attached lip and tape system.
- For seams that do not have the lip and tape feature, use a good quality single faced tape to seal the seams
- Install the floor covering product according to the manufacturer's instructions

Double-Glued Installation:

- Double Glue Down installations are approved with flooring that is a minimum thickness of 4mm.
- Be sure the subfloor is clean and free of dust and debris
- Unroll the first drop of QuietWalk Luxury Vinyl Underlayment and flip it over so the film side is up (felt side down)
- Make sure that underlayment seams run perpendicular (at right angle) to the long dimension of the planks
- Remove the lip portion of the lip and tape system with a utility knife and discard
- Remove the tape strip cover portion of the lip and tape system and discard
- Trim to fit the QuietWalk Luxury Vinyl Underlayment into the target areas.
- Move the trimmed-to-fit underlayment to the side to apply the adhesive
- Apply a recommended pressure sensitive adhesive using the flooring manufacturer recommended trowel

Subfloor and Preparation:

- All subfloors must be flat, clean, smooth and dry
- Sand any rough surfaces and/or uneven joists
- Fill any cracks on concrete or panel joints wider than 1/8" using a recommended patch/leveling product

LAS INSTRUCCIONES DE INSTALACIÓN

Toda la madera y los subsuelos concretos debe ser plana en más de 1/8" a 6" span o 3/16" durante un lapso de 10'. Todas las áreas deben ser verificados antes de la instalación.



▶ Vea videos y sugerencias de instalación en quietwalk.com/lv-install

🌐 Ver Garantía limitada de por vida en quietwalk.com/lv-warranty

INFORMACIÓN GENERAL

El producto puede instalarse sobre:

- QuietWalk LV se puede utilizar sobre cualquier contrapiso aprobado por el fabricante del revestimiento de piso terminado
- Adecuado con sistemas de calor radiante

Usos Recomendados:

- Aplicaciones residenciales en todos los niveles de grado
- Pisos flotantes de vinilo, laminados y madera de ingeniería
- Aplicaciones comerciales de doble cola (pisos de 4 mm o más gruesos)
- Uso interior en áreas secas y calientes

Subsuelo y preparación:

- Todos los contrapisos deben ser planos, limpios, lisos y secos
- Lije cualquier superficie rugosa y / o viguetas irregulares
- Rellene cualquier grieta en las juntas de concreto o paneles de más de 1/8" usando un producto de parche / nivelación recomendado

MÉTODOS DE INSTALACIÓN

Instalación de piso flotante:

- Asegúrese de que el subsuelo esté limpio, liso y libre de polvo y escombros
- Desenrolle la base de vinilo de lujo QuietWalk Luxury Vinyl y déle la vuelta para que la cara de la película quede hacia arriba (boca abajo)
- Asegúrese de que las costuras del contrapiso se extiendan perpendicularmente (en ángulo recto) a la dimensión larga de la tabla
- El contrapiso debe colocarse con una separación mínima de 4" entre las uniones de contrapiso y las costuras de los productos de piso terminado
- Recorte los bordes perimetrales del contrapiso QuietWalk Luxury Vinyl 1/4" de la pared
- Junte las juntas y selle con el sistema de cintas y labios adjunto.
- Para las costuras que no tienen la característica de punta y cinta, use una cinta de una cara de buena calidad para sellar las costuras
- Instale el producto que cubre el piso de acuerdo con las instrucciones del fabricante

Instalación con doble encolado:

- Las instalaciones de Double Glue Down están aprobadas con pisos de un espesor mínimo de 4 mm.
- Asegúrese de que el subsuelo esté limpio y libre de polvo y desechos
- Desenrolle la primera gota del contrapiso QuietWalk Luxury Vinyl y déle la vuelta para que el lado de la película quede hacia arriba (boca abajo)
- Asegúrese de que las costuras del contrapiso se extiendan perpendicularmente (en ángulo recto) a la dimensión larga de la tabla
- Retire la parte del labio del labio y el sistema de cinta con un cuchillo y deseche
- Retire la parte de la cubierta de la tira de cinta del labio y el sistema de cinta y deséchela
- Corte para ajustar el contrapiso QuietWalk Luxury Vinyl en las áreas objetivo.
- Mueva el contrapiso recortado para ajustar hacia un lado para aplicar el adhesivo

Pisos de madera noble con sujeción mecánica

- Desenrolle el contrapiso y asegúrese de que el lado del vapor esté hacia arriba y las fibras estén al contrapiso.
- Instale el contrapiso en dirección opuesta al material del piso. Puede pegar las costuras con cinta adhesiva, pero no es necesario.
- Instale la madera dura según las instrucciones escritas del fabricante, utilizando los materiales de sujeción recomendados.

Recorte y moldura:

- Todas las molduras de acabado y molduras de transición deben instalarse sin atascarse o restringir el libre movimiento de los productos para pisos terminados anteriormente