

.006 Film Barrier

MoistureBlock

For Use Under

- Hard Surface Flooring

Installation Methods

- Floating Floors



MOISTURE PROTECTION

MoistureBlock helps to protect floors from harmful moisture especially over concrete subfloors.



WARRANTY GUARANTEE

6 mil vapor barrier meets all concrete subfloor preparation requirements to fulfill warranty requirements from flooring manufacturers





COST EFFICIENT

Affordable and capable, high-quality protection for your floor.



SELF-SEALING INSTALLATION

Features user-friendly moisture-resistant tape along the border for ease of installation.

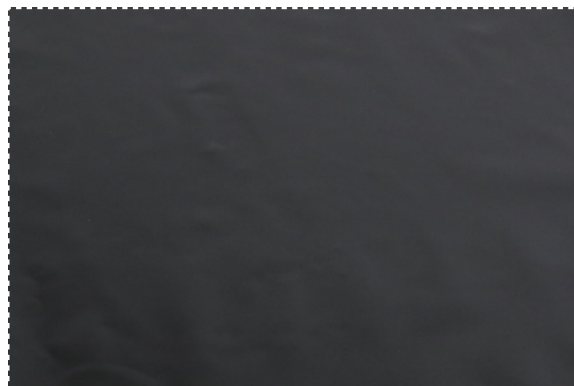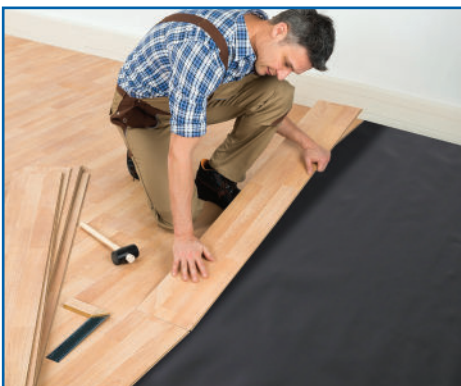

.006 Film Barrier *Moisture*Block

MoistureBlock is a Polyethylene film that should be used during the installation process with hard surface floors. No need to bother with large fold-out, low quality, off-spec, construction grade films, which are cumbersome to work over while installing flooring.

MoistureBlock is also recommended for use with floors on which padding is already attached during the manufacturing process.

It is recommended to also install a moisture resistant film over concrete or any substrate where moisture is a concern.

MoistureBlock meets all concrete subfloor preparation requirements to fulfill warranty requirements from the flooring manufacturers.

ADVANTAGES

- **Cost Efficient**
- **Humidity, Mold and Mildew resistant**
- **Non allergenic, odorless, and chemically inert**
- **Formulated for Superior moisture resistance**
- **Available with special, user-friendly moisture resistant self-sealing tape along the border, for ease of installation**

SPECIFICATIONS

Attribute	Specification
Thickness	.006 inch (6 mil)
Perm	0.09
WVTR	0.17 lbs/1,000 sqft/24 hours

INSTALLATION INSTRUCTIONS

- Always read the flooring manufacturers recommendations and instructions before installing the underlayment.
- Before rolling out the underlayment, be sure to sweep, vacuum, and remove all debris on the substructure.
- Fill in any significant holes, gaps or breaks that may exist on the substructure.
- Roll out the Underlayment over the substructure surface.
- Splice each roll of underlayment with a 3 mil tape, duct tape, or similar pressure-sensitive tape that meets/exceeds the water vapor transmission ratings suggested by the flooring manufacturer.
- If installing MoistureBlock Film Underlayment with Self-Sealing film edge, simply connect the rolls by removing the liner from the tape and adhere to the edge of the previous roll.
- Always be sure to connect the film rolls together with the adhesive tape evenly so that there are no gaps between the adjoining rolls of film.