



**Designed for use with:**

- Laminate
- Hardwoods & Bamboo
- Vinyl Plank
- Duravana® Hybrid Resilient

**100 SQ FT**

3' x 33.3' Roll Size - 1.9mm Thickness



# QUIETWALK® MAX


PREMIUM UNDERLAYMENT & WATER DEFENSIVE BARRIER

**The secret's in the SILVER!**

A metalized vapor barrier provides thermal reflectivity to help keep your home comfortable.



Water Protection

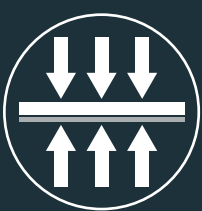

Resists Compression From Daily Traffic



Sound Reduction



Insulating Value



Made From Recycled Materials



Antimicrobial Treated Fibers



Recommended For Pad Attached Flooring



Customer Reviews

★★★★★

**Saved my bamboo floor**

"Had minor flood damage for an unknown amount of time. This underlayment took all the damage and protected the flooring from mold. I was able to reuse the existing flooring over NEW underlayment! Good stuff."

★★★★★

**Great product**

"Great product, durable, and easy to install. The floors are very quiet with this underlay, and it does help make the flooring feel "warmer."

## Water Protection

QuietWalk MAX premium underlayment provides a moisture management system to help protect your flooring investment from both top and bottom side water!




FEATURING **DRI-WICK** EXCLUSIVE TECHNOLOGY

Water Vapor  
Attached Class I Vapor Barrier  
Recycled Fiber Pad with antimicrobial treated fibers!

Concrete Subfloor

Watch how!  
[quietwalk.com/driwick](http://quietwalk.com/driwick)

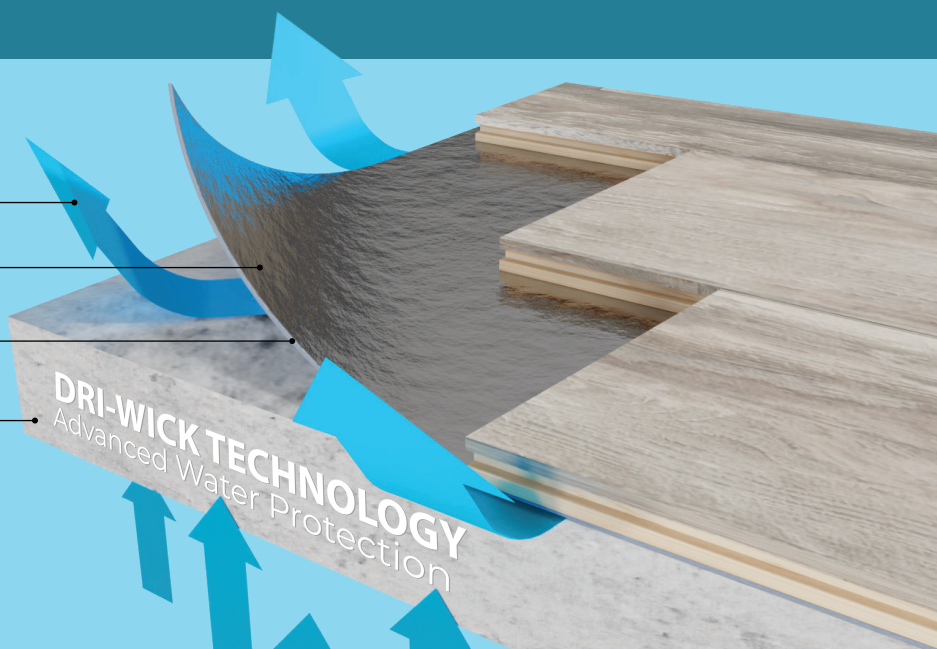

Vapor & Moisture Protection • Excellent Noise Reduction • Home Insulation Value

Specifications


- Sound Insulation **IIC 73, STC 67**
- Moisture Emissions Allowance: **NO LIMIT**
- Thermal Insulation **R-Value 0.61**
- Compression Strength **278.9 psi**

Safety & Environment

- **Odorless, no VOCs**
- **Antimicrobial treated fibers**
- **Approved for use with radiant heat systems**
- **Made from recycled materials**
- **LEED compliant**



**Click it.**  
**Nail it.**  
**Glue it.**

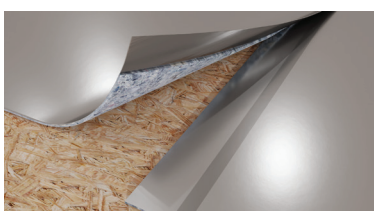

**Installation Friendly Built In Seam Seal!**

Designed for use with:

- Laminate
- Hardwoods & Bamboo
- Vinyl Plank
- Duravana® Hybrid Resilient

QuietWalk MAX QW100MAX 1EA

6 96087 10612 6


1 0 0 5 6 8 7 7

COUNTRY OF ORIGIN: UNITED STATES  
DISTRIBUTED BY: MP GLOBAL PRODUCTS, LLC




# QUIETWALK<sup>®</sup> MAX

PREMIUM UNDERLAYMENT & WATER DEFENSIVE BARRIER

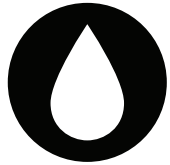


Water Protection  
*Agua Protección*

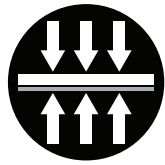


Resists Compression From Daily Traffic  
*Resiste la compresión del tráfico diario*




Sound Reduction  
*Sonido Reducción*

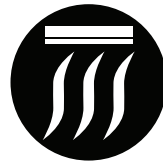

Insulating Value  
*Aislante Valor*

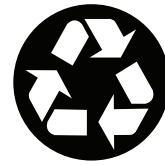

Made From Recycled Materials  
*Hecho de materiales reciclados*

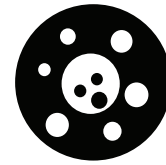

Antimicrobial Treated Fibers  
*Fibras tratadas con antimicrobianos*



Recommended For Pad Attached Flooring  
*Recomendado para pisos con almohadillas*

## GENERAL INFORMATION

### PRODUCT MAY BE INSTALLED OVER:

- QuietWalk Max may be used over any subfloor approved by the finished floor covering manufacturer
- Suitable with Radiant Heat Systems. **Install film side facing subfloor when paired with QuietWarmth.**

### RECOMMENDED USES:

- Residential applications above, on, and below grade
- Interior use in dry, conditioned spaces
- Floating Vinyl Plank and Tile, Laminate and Wood Floors
- Double glue applications (4mm or thicker flooring)
- Mechanically fasten floors for solid and engineered wood

### SUBFLOOR AND PREPARATION:

- All wood and concrete subfloors must be flat within 1/8" over a 6' span, or 3/16" over a 10' span. All areas must be checked prior to installation
- All subfloors must be flat, clean, smooth, and dry
- Sand any rough surfaces and/or uneven joists
- Fill any cracks in concrete or panel joints wider than 1/8" using a recommended patch/leveling product
- For installation over concrete slabs, refer to flooring manufacturer's recommendations for moisture tolerances

## INSTALLATION INSTRUCTIONS

### CLICK/FLOATING FLOOR INSTALLATION:

1. Be sure the subfloor is clean, smooth, and free of dust and debris.
2. Unroll the QuietWalk Max and flip it over to ensure that the film side is up (fiber side down). **Install film side facing subfloor when paired with QuietWarmth Float.**
3. Make sure the underlayment seams run perpendicular to the long dimension of the floor covering.
4. Underlayment must be positioned with a minimum 4" separation between the seams of the underlayment and the seams of the floor covering.
5. Trim the perimeter edges of the QuietWalk Max 1/4" from all walls and perimeter edges.
6. Butt seams together and seal using the factory attached lip and tape system.
7. For seams that do not have the lip and tape feature, use a good quality duct tape, at least 2" wide, to seal the seams.
8. Install the floor covering according to the manufacturer's instructions.

### DOUBLE-GLUE INSTALLATION:

1. Double-Glue-Down installations are approved with floor coverings that are a minimum of 4mm in thickness.
2. Be sure the subfloor is clean, smooth, and free of dust and debris.
3. Unroll the QuietWalk Max and flip it over to ensure that the film side is up (fiber side down). **Install film side facing subfloor when paired with QuietWarmth Tile.**
4. Make sure the underlayment seams run perpendicular to the long dimension of the floor covering.
5. Underlayment must be positioned with a minimum 2" separation between the seams of the underlayment and the seams of the floor covering.
6. Remove the lip portion of the lip and tape system with a utility knife and discard.
7. Remove the tape strip cover of the lip and tape system and discard.
8. Trim to fit the QuietWalk Max into the target areas leaving a 1/4" gap from all walls and perimeter edges.
9. Move the trimmed-to-fit underlayment to the side and apply the adhesive.
10. Apply a recommended pressure sensitive adhesive using the adhesive manufacturer's recommended trowel size.
11. Once the adhesive has flashed (dried/tacky to the touch) place the trimmed-to-fit underlayment into the adhesive.
12. Butt seams together and apply 2" wide clear packaging tape centered over each seam.
13. Roll the QuietWalk Max underlayment into the adhesive using a 75lb-100lb roller.
14. Mark starting lines on the underlayment for placement of floor covering.
15. Apply the floor covering manufacturer's recommended adhesive using their recommended trowel size.
16. Install the floor covering according to the manufacturer's instructions.

### MECHANICALLY FASTENED INSTALLATION:

1. Be sure the subfloor is clean, smooth, and free of dust and debris.
2. Unroll the QuietWalk Max and flip it over to ensure that the film side is up (fiber side down).
3. Make sure the underlayment seams run perpendicular to the long dimension of the floor covering.
4. Underlayment must be positioned with a minimum 4" separation between the seams of the underlayment and the seams of the floor covering.
5. Trim the perimeter edges of the QuietWalk Max 1/4" from all walls and perimeter edges.
6. Butt seams together and seal using the factory attached lip and tape system.
7. For seams that do not have the lip and tape feature, use a good quality duct tape, at least 2" wide, to seal the seams.
8. Install the floor covering according to the manufacturer's instructions.



Scan to view installation videos, warranty and tips!  
¡Escanee para ver videos de instalación, garantía y otros consejos!



## INFORMACIÓN GENERAL

### EL PRODUCTO SE PUEDE INSTALAR SOBRE:

- QuietWalk Max se puede utilizar sobre cualquier subsuelo aprobado por el fabricante de revestimientos de suelos terminados
- Adecuado con sistemas de calor radiante. **Adecuado con sistemas de calor radiante. Instale la película con el lado orientado hacia el contrapiso cuando se combine con QuietWarmth.**

### USOS RECOMENDADOS:

- Aplicaciones residenciales sobre, en superficie y bajo rasante
- Uso interior en espacios secos y acondicionados
- Pisos flotantes de vinilo, baldosas, laminados y de madera
- Aplicaciones de doble encolado (pisos de 4 mm o más de espesor)
- Fijación mecánica de pisos para madera maciza e industrial

### SUBSUELO Y PREPARACIÓN:

- Todos los subsuelos de madera y concreto deben ser planos dentro de 1/8" en un tramo de 6', o 3/16" en un tramo de 10'. Todas las áreas deben ser revisadas antes de la instalación
- Todos los subsuelos deben ser planos, limpios, lisos y secos
- Lijar cualquier superficie rugosa y/o viguetas irregulares
- Llene cualquier grieta en juntas de concreto o paneles de más de 1/8" usando un producto de parche / nivelación recomendado
- Para la instalación sobre losas de concreto, consulte las recomendaciones del fabricante de pisos para las tolerancias a la humedad

## INSTRUCCIONES DE INSTALACIÓN

### CLIC/INSTALACIÓN DE SUELO FLOTANTE:

1. Asegúrese de que el subsuelo esté limpio, liso y libre de polvo y escombros.
2. Desenrolle el QuietWalk Max y voltéelo para asegurarse de que el lado de la película esté hacia arriba (lado de la fibra hacia abajo). **Instale la película con el lado orientado hacia el contrapiso cuando se combine con QuietWarmth Float.**
3. Asegúrese de que las costuras de la capa inferior corran perpendiculares a la dimensión larga del revestimiento del piso.
4. La capa inferior debe colocarse con una separación mínima de 4" entre las costuras de la capa inferior y las costuras del revestimiento del piso.
5. Recorte los bordes perimetrales del QuietWalk Max 1/4" de todas las paredes y bordes perimetrales.
6. Las costuras de las colillas se juntan y se sellan utilizando el sistema de labio y cinta adherido de fábrica.
7. Para las costuras que no tienen la función de labio y cinta, use una cinta adhesiva de buena calidad, de al menos 2" de ancho, para sellar las costuras.
8. Instale el revestimiento del piso de acuerdo con las instrucciones del fabricante.

### INSTALACIÓN DE DOBLE PEGAMENTO:

1. Las instalaciones de doble pegamento están aprobadas con revestimientos para pisos que tienen un espesor mínimo de 4 mm.
2. Asegúrese de que el subsuelo esté limpio, liso y libre de polvo y escombros.
3. Desenrolle el QuietWalk Max y voltéelo para asegurarse de que el lado de la película esté hacia arriba (lado de la fibra hacia abajo). **Instale la película con el lado orientado hacia el contrapiso cuando se combine con QuietWarmth Tile.**
4. Asegúrese de que las costuras de la capa inferior corran perpendiculares a la dimensión larga del revestimiento del piso.
5. La capa inferior debe colocarse con una separación mínima de 2" entre las costuras de la capa inferior y las costuras del revestimiento del piso.
6. Retire la parte de los labios del sistema de labio y cinta adhesiva con un cuchillo utilitario y deseche.
7. Retire la tapa de la tira de cinta adhesiva del sistema de labio y cinta y deséchela.
8. Recorte para adaptar el QuietWalk Max a las áreas objetivo, dejando un espacio de 1/4" de todas las paredes y bordes perimetrales.
9. Mueva la capa inferior recortada para ajustar hacia un lado y aplique el adhesivo.
10. Aplique un adhesivo sensible a la presión recomendado utilizando el tamaño de llana recomendado por el fabricante del adhesivo.
11. Una vez que el adhesivo haya parpadeado (seco / pegajoso al tacto), coloque la capa inferior recortada para ajustar en el adhesivo.
12. Las costuras de los glúteos se juntan y aplican cinta de embalaje transparente de 2" de ancho centrada sobre cada costura.
13. Enrolle la capa base QuietWalk Max en el adhesivo con un rodillo de 75 lb-100 lb.
14. Marque las líneas de partida en la capa inferior para la colocación del revestimiento del piso.
15. Aplique el adhesivo recomendado por el fabricante del revestimiento del piso utilizando el tamaño de llana recomendado.
16. Instale el revestimiento del piso de acuerdo con las instrucciones del fabricante.

### INSTALACIÓN SUJETA MECÁNICAMENTE:

1. Asegúrese de que el subsuelo esté limpio, liso y libre de polvo y escombros.
2. Desenrolle el QuietWalk Max y voltéelo para asegurarse de que el lado de la película esté hacia arriba (lado de la fibra hacia abajo).
3. Asegúrese de que las costuras de la capa inferior corran perpendiculares a la dimensión larga del revestimiento del piso.
4. La capa inferior debe colocarse con una separación mínima de 4" entre las costuras de la capa inferior y las costuras del revestimiento del piso.
5. Recorte los bordes perimetrales del QuietWalk Max 1/4" de todas las paredes y bordes perimetrales.
6. Las costuras de las colillas se juntan y se sellan utilizando el sistema de labio y cinta adherido de fábrica.
7. Para las costuras que no tienen el sistema de labio y cinta adherido de fábrica, se puede hacer una cinta adhesiva de las costuras, pero no es necesario en aplicaciones de sujeción mecánica.
8. Instale el revestimiento del piso de acuerdo con las instrucciones del fabricante.

QW100MAX

RATED RESIDENTIAL AND COMMERCIAL

MPglobal

MP Global Products, LLC • www.mpglobalproducts.com

REV5 0725